


8273

Mobile stairway tower with cross-beam

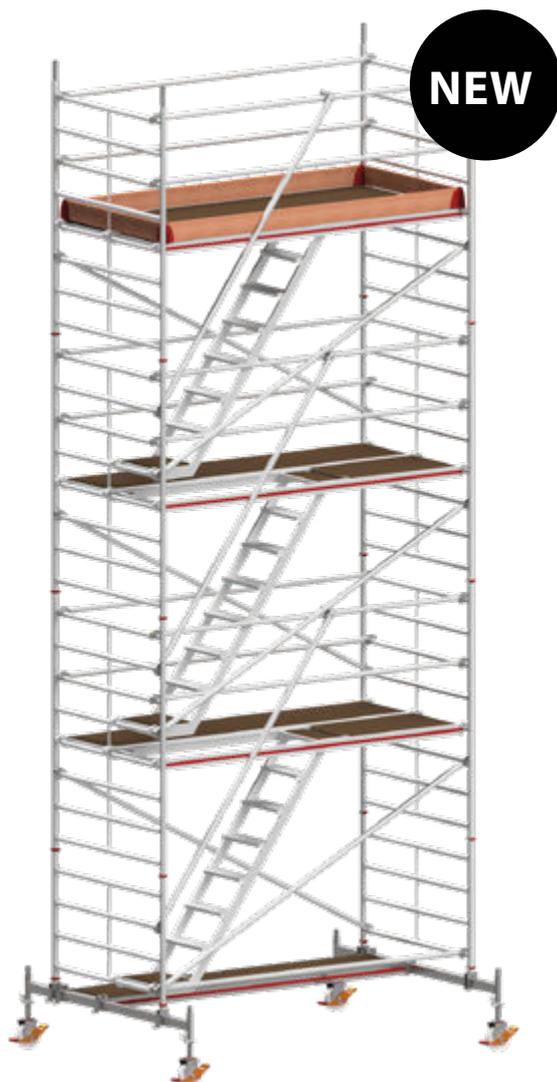

Access high places safely using stairs: Combines all the advantages of HYMER mobile towers with cross-beams. Features spacious, non-slip work platform and four height-adjustable castors. Safe ascent thanks to internal stairs.

Features:

- **Work platform: 2.95 × 1.30 m**
- **Castors: Ø 200 mm**
- **Permissible load: 150 kg/m² (1.5 kN/m²)**



| | | | | | |
|---------------------------------|--------|----------------------|-------------------|---------------|-------------------------|
| Reach height (approx. m) | 4.60 | 6.60 | 8.60 | 10.60 | 12.60 |
| Tower height (approx. m) | 3.82 | 5.82 | 7.82 | 9.82 | 11.82 |
| Standing height (approx. m) | 2.60 | 4.60 | 6.60 | 8.60 | 10.60 |
| Platform length (approx. m) | 2.95 | 2.95 | 2.95 | 2.95 | 2.95 |
| Frame section width (approx. m) | 1.50 | 1.50 | 1.50 | 1.50 | 1.50 |
| Ballasting | | | | | |
| Indoor, centre (kg) | 0 | 0 | 0 | 0 | 0 |
| Indoor, on wall (kg) | 0 | 0 | 0 | 0 | 20 ⁽¹⁾⁽³⁾⁽⁴⁾ |
| Outdoor, centre (kg) | 0 | 0 | 60 ⁽²⁾ | not permitted | not permitted |
| Outdoor, on the wall (kg) | 0 | 40 ⁽⁵⁾⁽¹⁾ | not permitted | not permitted | not permitted |
| Order no. | 827304 | 827306 | 827308 | 827310 | 827312 |

⁽¹⁾ Ballasting is not required when using two wall connectors (607141) for pressure support.

⁽²⁾ Two cross-beam extensions (817133) are required.

⁽³⁾ Ballasting is not required when using a longitudinal cross-beam (607143).

⁽⁴⁾ Ballasting is not required when using two cross-beam extensions (817133).

⁽⁵⁾ A longitudinal cross-beam (607143) is required in addition to the ballast.

Required additional parts from page 23.

Individual parts and parts list can be found in the instructions for assembly and use on page 67. | [Click here.](#)