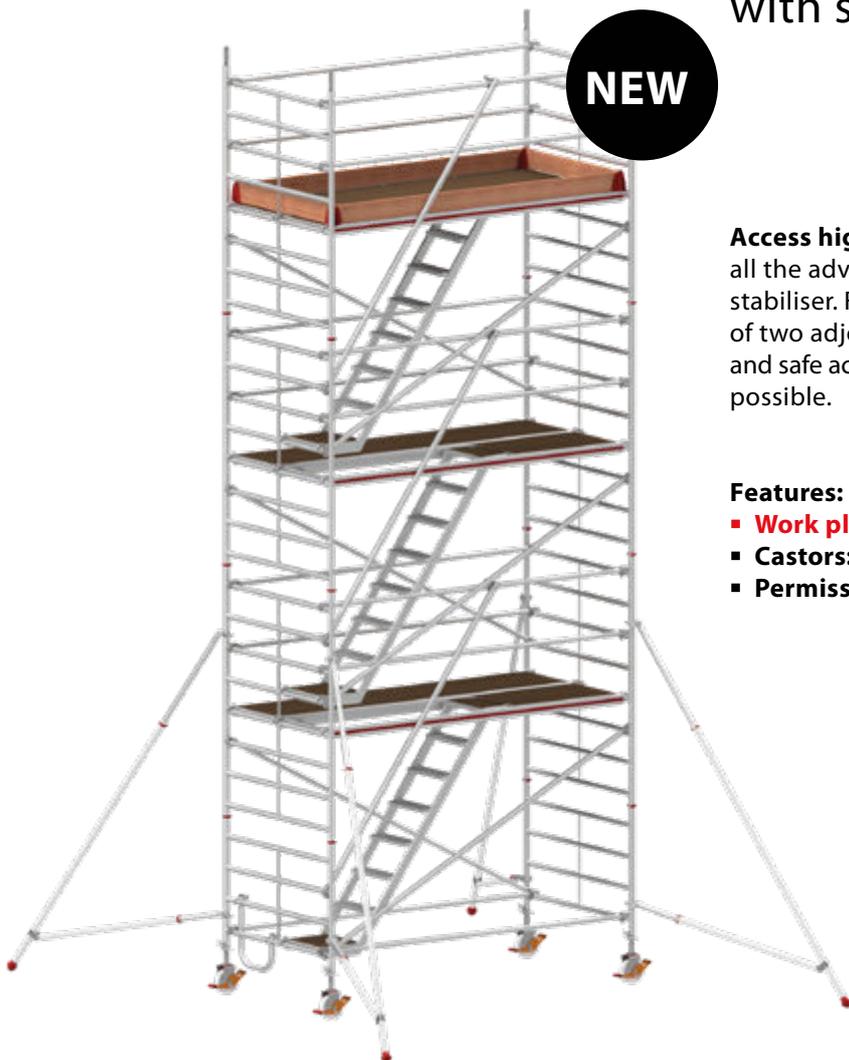


8573

 
 
Mobile stairway tower with stabiliser

NEW

Access high places safely using stairs: Combines all the advantages of HYMER mobile towers with stabiliser. Features a spacious work surface consisting of two adjoining platforms, four height-adjustable castors and safe access via internal stairs. Set up in stairways where possible.

Features:

- **Work platform: 2.95 × 1.30 m**
- **Castors: Ø 200 mm**
- **Permissible load: 150 kg/m² (1.5 kN/m²)**



| | | | | | |
|---------------------------------|--------|------------------|-------------------|-------------------|-------------------|
| Reach height (approx. m) | 4.40 | 6.40 | 8.40 | 10.40 | 12.40 |
| Tower height (approx. m) | 3.64 | 5.64 | 7.64 | 9.64 | 11.64 |
| Standing height (approx. m) | 2.40 | 4.40 | 6.40 | 8.40 | 10.40 |
| Platform length (approx. m) | 2.95 | 2.95 | 2.95 | 2.95 | 2.95 |
| Frame section width (approx. m) | 1.50 | 1.50 | 1.50 | 1.50 | 1.50 |
| Ballasting | | | | | |
| Indoor, centre (kg) | 0 | 0 | 0 | 0 | 0 |
| Indoor, on wall (kg) | 0 | 0 | 20 ⁽¹⁾ | 20 ⁽¹⁾ | 30 ⁽¹⁾ |
| Outdoor, centre (kg) | 40 | 0 | 0 | not permitted | not permitted |
| Outdoor, on the wall (kg) | 40 | 0 ⁽²⁾ | 0 ⁽²⁾ | not permitted | not permitted |
| Order no. | 857304 | 857306 | 857308 | 857310 | 857312 |

⁽¹⁾Ballasting is not required when using two wall connectors (607141) for pressure support.

⁽²⁾ Two wall connectors (607141) are required for pressure support.

Required additional parts from page 23.

Individual parts and parts list can be found in the instructions for assembly and use on page 67. | [Click here.](#)