

8771












Mobile tower with stabiliser



Safely set up in no time: Thanks to the practical HYMER lifter, diagonals and struts can be attached and detached quickly and safely from below. From a reach height of 4.40 metres with telescopic stabiliser with bayonet catch for easy assembly from the ground. With large platform and four height-adjustable swivel castors. Also: optional assembly with height offset, for example in staircase position.

Features:

- **Work platform: 2.45 × 0.65 m**
- **Castors: Ø 200 mm**
- **Permissible load: 200 kg/m² (2.0 kN/m²)**

											
Reach height (approx. m)	3.40	4.40	5.40	6.40	7.40	8.40	9.40	10.40	11.40	12.40	13.40
Tower height (approx. m)	2.64	3.64	4.64	5.64	6.64	7.64	8.64	9.64	10.64	11.64	12.64
Standing height (approx. m)	1.40	2.40	3.40	4.40	5.40	6.40	7.40	8.40	9.40	10.40	11.40
Platform length (approx. m)	2.45	2.45	2.45	2.45	2.45	2.45	2.45	2.45	2.45	2.45	2.45
Frame section width (approx. m)	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80
Ballasting											
Indoor, centre (kg)	80	0	0	0	0	0	0	0	0	0	0
Indoor, on wall (kg)	80	40 ⁽¹⁾	60 ⁽¹⁾	80 ⁽¹⁾	100 ⁽¹⁾	140 ⁽¹⁾	160 ⁽¹⁾	180 ⁽¹⁾	200 ⁽¹⁾	240 ⁽¹⁾	260 ⁽¹⁾
Outdoor, centre (kg)	80	0	0	0	0	0	0	not permitted	not permitted	not permitted	not permitted
Outdoor, on the wall (kg)	80	60 ⁽¹⁾	100 ⁽¹⁾	0 ⁽²⁾	0 ⁽²⁾	0 ⁽²⁾	40 ⁽²⁾	not permitted	not permitted	not permitted	not permitted
Order no.	877103	877104	877105	877106	877107	877108	877109	877110	877111	877112	877113

⁽¹⁾ Ballasting is not required when using two wall connectors (607141) for pressure support.

⁽²⁾ Two wall connectors (607141) need to be used for pressure support.

Required additional parts from page 23.

Individual parts and parts list can be found in the instructions for assembly and use on page 67. | [Click here.](#)